

DENON®

PMA-600NE

INTEGRATED AMPLIFIER

Quick Start Guide

Kurzanleitung / Guide de démarrage rapide / Guida di Avvio Rapido /
Guía de inicio rápido / Snelhandleiding / Snabbstartsguide /
Краткое руководство пользователя / Skrócona instrukcja obsługi

Read Me First....

Bitte zuerst lesen... / Lisez-moi en premier.... / Nota preliminare.... /
Lea esto primero.... / Lees mij eerst... / Läs detta först... /
Прочитайте в первую очередь... / Przeczytaj to najpierw....

ENGLISH

DEUTSCH

FRANÇAIS

ITALIANO

ESPAÑOL

NEDERLANDS

SVENSKA

РУССКИЙ

POLSKI

Welcome

Thank you for choosing a Denon amplifier.
This guide provides step-by-step instructions for setting up your amplifier.

Please do not return this unit to the store – call for assistance.

If you need help... :

If you need additional help in solving problems, contact Denon customer service in your area.
For details, see the Denon homepage.

 
 
www.denon.com

Before You Begin

What's In the Box

Quick Start Guide		Notes on radio	
CD-ROM (Owner's Manual)		Integrated Amplifier	
Safety Instructions		Remote control unit (RC-1234)	
Cautions on Using Batteries		R03/AAA batteries	

Required for Basic connections

			
CD player	Speaker systems	Speaker cables	Audio cable




- These drawings are for illustrative purposes only and may not represent the actual product(s).

Setup


There are five steps to the setup process.

- 1** Install batteries in the remote control unit
- 2** Connect the speakers to the amplifier
- 3** Connect the CD player to the amplifier
- 4** Plug the power cord into a power outlet
- 5** Enjoying your music!

1 Install batteries in the remote control unit

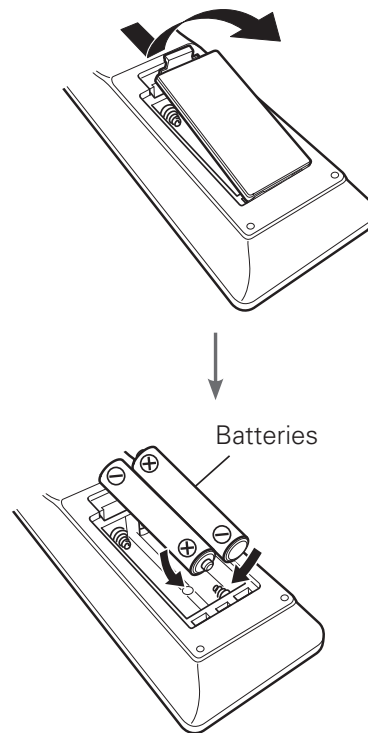

2 Connect the speakers to the amplifier

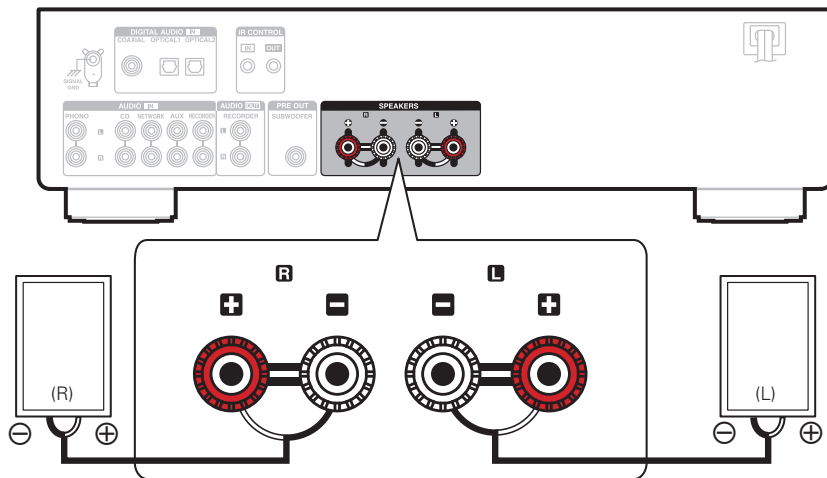


Connecting the speaker cables


- ① Peel off about 10 mm of sheathing from the tip of the speaker cable, then either twist the core wire tightly or apply solder to it.
- ② Turn the speaker terminal counterclockwise to loosen it.
- ③ Insert the speaker cable's core wire to all the way into the speaker terminal.
- ④ Turn the speaker terminal clockwise to tighten it.



3 Connect the CD player to the amplifier

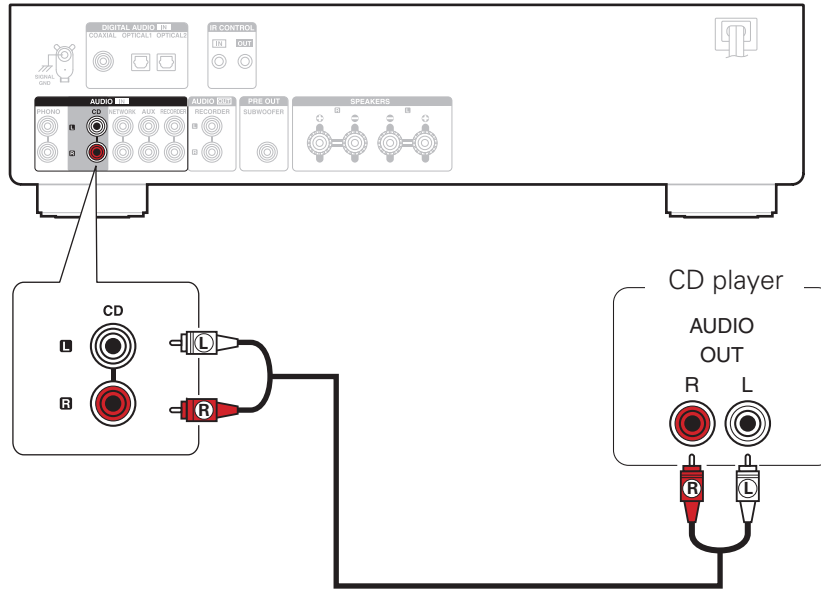


4 Plug the power cord into a power outlet

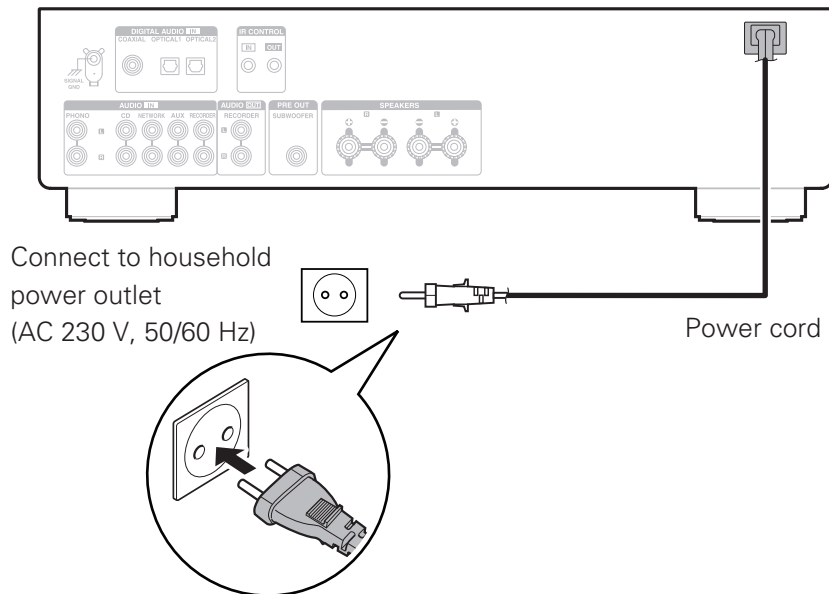


5 Enjoying your music!

■ Begin CD playback

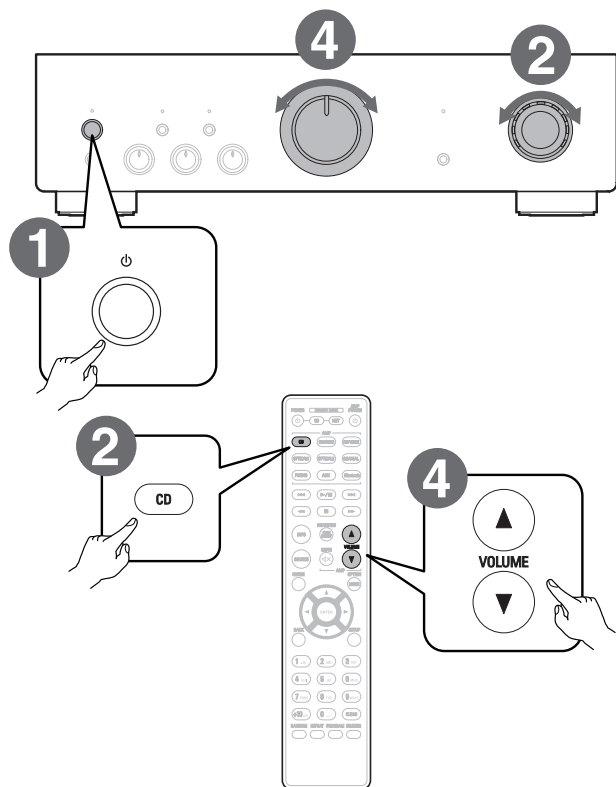

- 1 Press the power operation button.**
Turn VOLUME on the main unit to adjust the volume to the lowest level before turning on the power.
- 2 Set the input source to “CD”.**
The “CD” input indicator lights.
- 3 Play the CD player.**

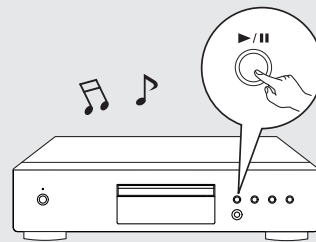


- 4 Adjust the volume.**

■ Enjoying music using Bluetooth

1


Press Bluetooth to select Bluetooth.

When using for the first time, the unit will go into the pairing mode automatically and the DIGITAL IN/BLUETOOTH indicator on the main unit will blink in blue in intervals of about 1 second.

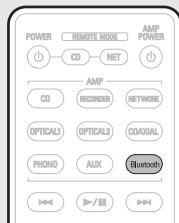

2

Activate Bluetooth on your mobile device.

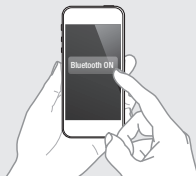


3

Select “Denon PMA-600NE” from the Bluetooth device list on your mobile device.



4

Play music using any app on your device.

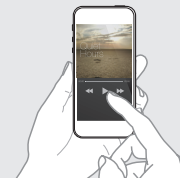

- To pair with other Bluetooth devices, press and hold Bluetooth on the remote control until the DIGITAL IN/BLUETOOTH indicator on the main unit will blink in blue in intervals of about 1 second.

Owner's Manual

Please reference to the Owner's Manual for more details about the setup and operation of the amplifier and its features.

❏ Online Version

Enter the following URL into your web browser:
manuals.denon.com/PMA600NE/EU/EN/



Online Manual




❏ Printable Version

Access the print version of the owner's manual from the included CD-ROM or select the "PDF Download" link from the Online Version.

1

**Insert the disc into
your PC.**

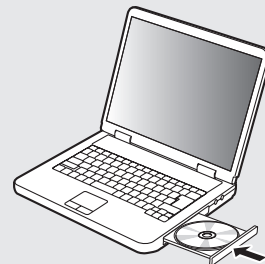

2

**Follow the screen or double click on
the PDF file.**

DENON®
www.denon.com

Printed in Vietnam 5411 11763 00AD
Copyright © 2019 D&M Holdings Inc. All Rights Reserved.