

MONKEY LOOP

ML-OD1



SPECIFICATIONS

Input Impedance: 500 kohm

Output Impedance: 150 ohm

Recommended Load Impedance: 10 kohm

Equival Input Noise: -90 dBu or less

Current Draw: 5.7 mA (DC 9V)

Dimension: 94mm×42mm×48mm

Weight: 133g

Accessory: Owner's Manual, Velcro tape 1 pair



AC/DC Adapter Jack

Use only specified AC adapter, and connect it to an AC outlet of the correct voltage.

Tone Knob

This controls the tone. Rotating the knob counterclockwise will make the sound milder, while rotating it clockwise will make the sound sharper.

Level Knob

This knob adjusts the level of the effect sounds.

Input Jack

This jack accepts signals from a guitar or other effect pedals.



Gain Knob

This adjusts the amount of distortion. Rotating it clockwise increases the effect, whereas counterclockwise rotation reduces the effect.

Output Jack


Connect this jack to your amp or to the input of another effect pedal.

Pedal Switch

This switch turns the effect ON/OFF.

Indicator

The indicator shows whether the effect is ON or OFF.

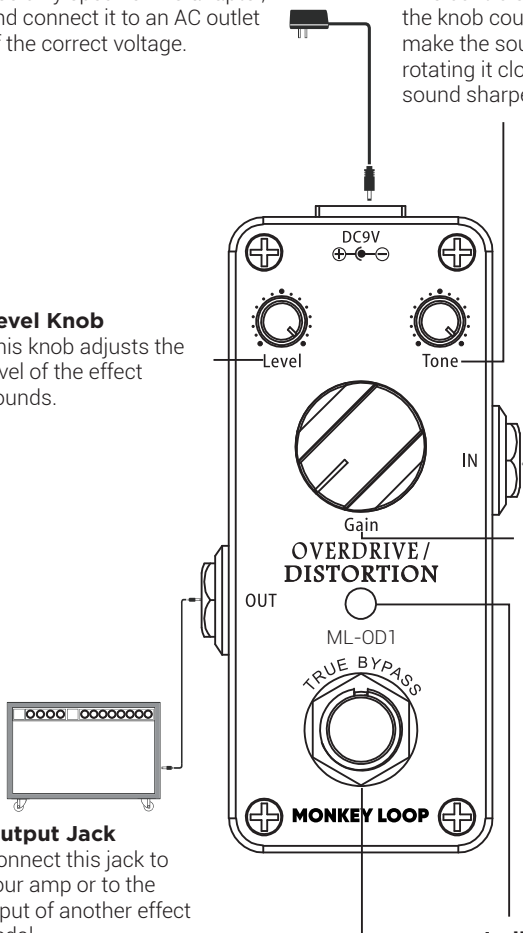

MONKEY LOOP

ML-OD1



ESPECIFICACIONES

Impedancia de entrada: 500 kohm

Impedancia de salida: 150 ohmios

Impedancia de carga recomendada: 10 kohm

Ruido de entrada equivalente: -90 dBu o menos

Consumo de corriente: 5,7 mA (CC 9 V)

Dimensión: 94 mm × 42 mm × 48 mm

Peso: 133g

Accesorio: Manual del propietario, cinta de velcro, 1 par



Conector adaptador CA/CC

Utilice únicamente el adaptador de CA especificado y conéctelo a una toma de CA del voltaje correcto.

Control de tono

Esto controla el tono. Girar la perilla en el sentido contrario a las agujas del reloj hará que el sonido sea más suave, mientras que girarla en el sentido de las agujas del reloj, hará que el sonido sea más agudo.

Control de nivel

Esta perilla ajusta el nivel del efecto.

Conector de entrada

Este conector acepta señales de una guitarra u otros pedales de efectos.



Control de ganancia

Esto ajusta la cantidad de distorsión. Girarlo en el sentido de las agujas del reloj aumenta el efecto, mientras que girarlo en el sentido contrario a las agujas del reloj lo reduce.

Indicador

El indicador muestra si el efecto está activado o desactivado.

Interruptor de pedal

Este interruptor activa/desactiva el efecto.

Conector de salida

Conecte este jack a su amplificador o a la entrada de otro pedal de efectos.

